

fresca
do it with flair

BIFOLD
Shower Enclosure




Instructions



BEFORE YOU INSTALL YOUR BIFOLD SHOWER ENCLOSURE PLEASE READ ALL INSTRUCTIONS. FAILURE TO DO SO MAY LEAD TO INVALIDATION OF YOUR WARRANTY.

- Your enclosure **MUST** always be fixed onto a sturdy tiled wall to ensure a waterproof shower.
- The shower tray **MUST** be fitted level, tiled in and sealed along it's entire wall length.
- The shower should be sealed using silicon sealant, vertically inside and out and horizontally on the outside only. This allows any water trapped inside the frame to escape into the tray.
- **WARNING:** Check walls for electric cabling or water pipes before drilling.

Tools required
to install your
new Fresca
Bifold Shower
Enclosure

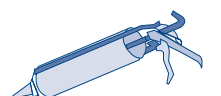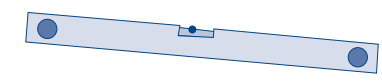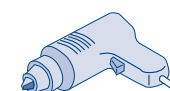

1 Fit Wall Bracket x 2 • Drill • Plug • Screw



Fit wall brackets (A) 10mm in from the outside of the shower tray ensuring the profile is square. Mark each hole for position.



Drill with a 5.5mm masonry drill bit.



Insert wall plugs into drilled holes.



Insert 38mm screw into collar X 3 and secure one wall bracket to wall on the side the door will hinge from.



Snap screw head cover on all screws

2 Secure Door • Position • Join • Screw

Place Wall Bracket on door opening side of the product. Carefully lift the product and (A) place in to the secured Wall Profile (B). Rotate the product into position and secure the Wall Bracket as per step (5/1) above.



Ensure that the door is square within the frame and drill through existing holes in the door frame into fixed Wall Brackets (A) top and bottom.




Insert 12mm screw into collar x 4 and secure. Snap screw head covers on top and bottom.



3 Fix Handles • Assemble • Screw

Assemble Handle components F022 + F024 as shown ensuring glass protection sleeves and discs are used.

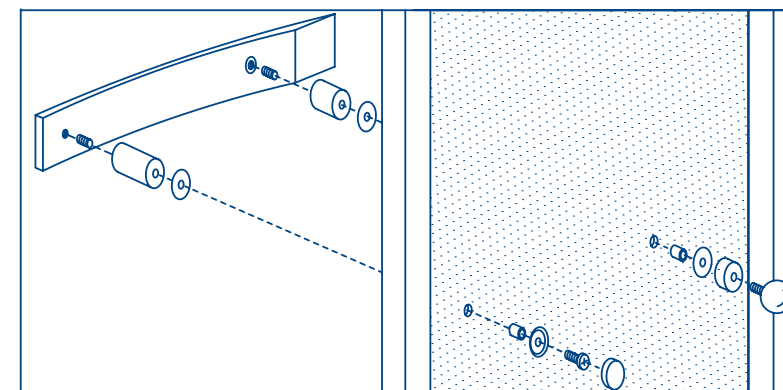

- x 6
- x 6 (38mm)
- x 4 (12mm)
- x 10
- x 10
- x 1 (ø3mm)


F009

- x 2
- x 1
- x 2
- x 1
- x 1
- x 3

F021

- x 1
- x 1
- x 1

F022

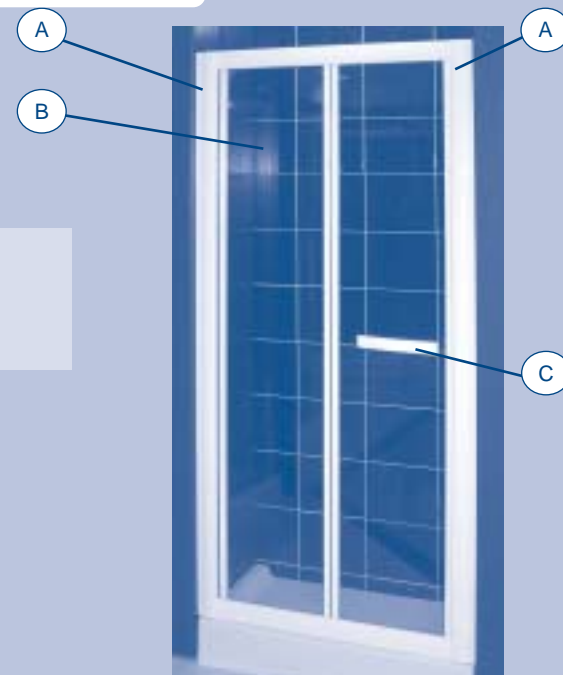

- (A) Wall brackets
- (B) Door
- (C) Handle

4 Waterproofing • Silicone Seal

Seal the OUTSIDE edge of the shower with suitable bathroom silicone all around the Shower Tray and the joining between the Wall Brackets (A) and the tiled wall. Allow to set for a minimum of 24 hours before using the shower.

